


ROOM SIDE BATH FAN INSTALLATION BRACKET


CUSTOMER EXPERIENCE IMPROVEMENTS

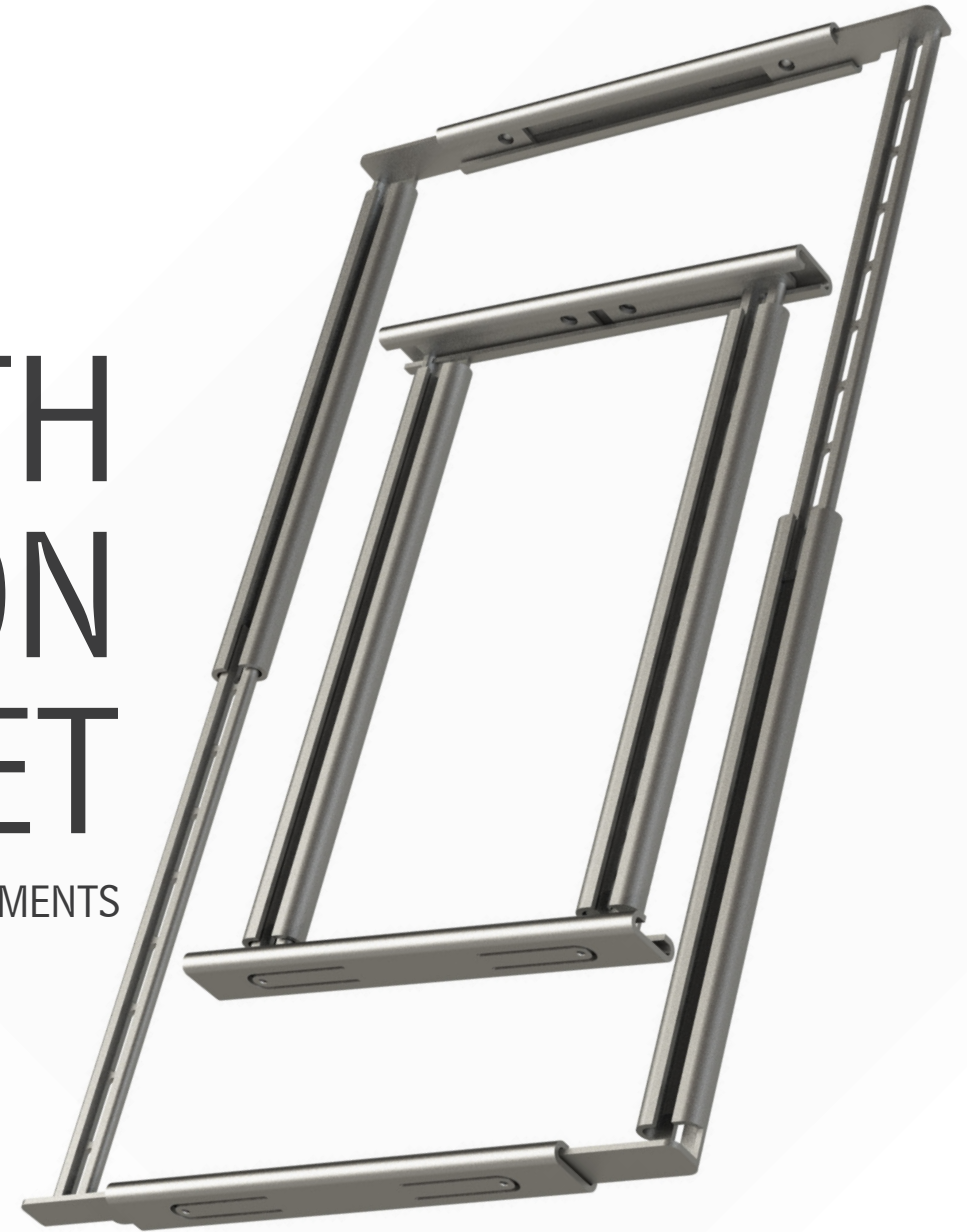


SIZE RANGE:


MINIMUM 8.5" X 12.5"

MAXIMUM 12.25" X 22.25"

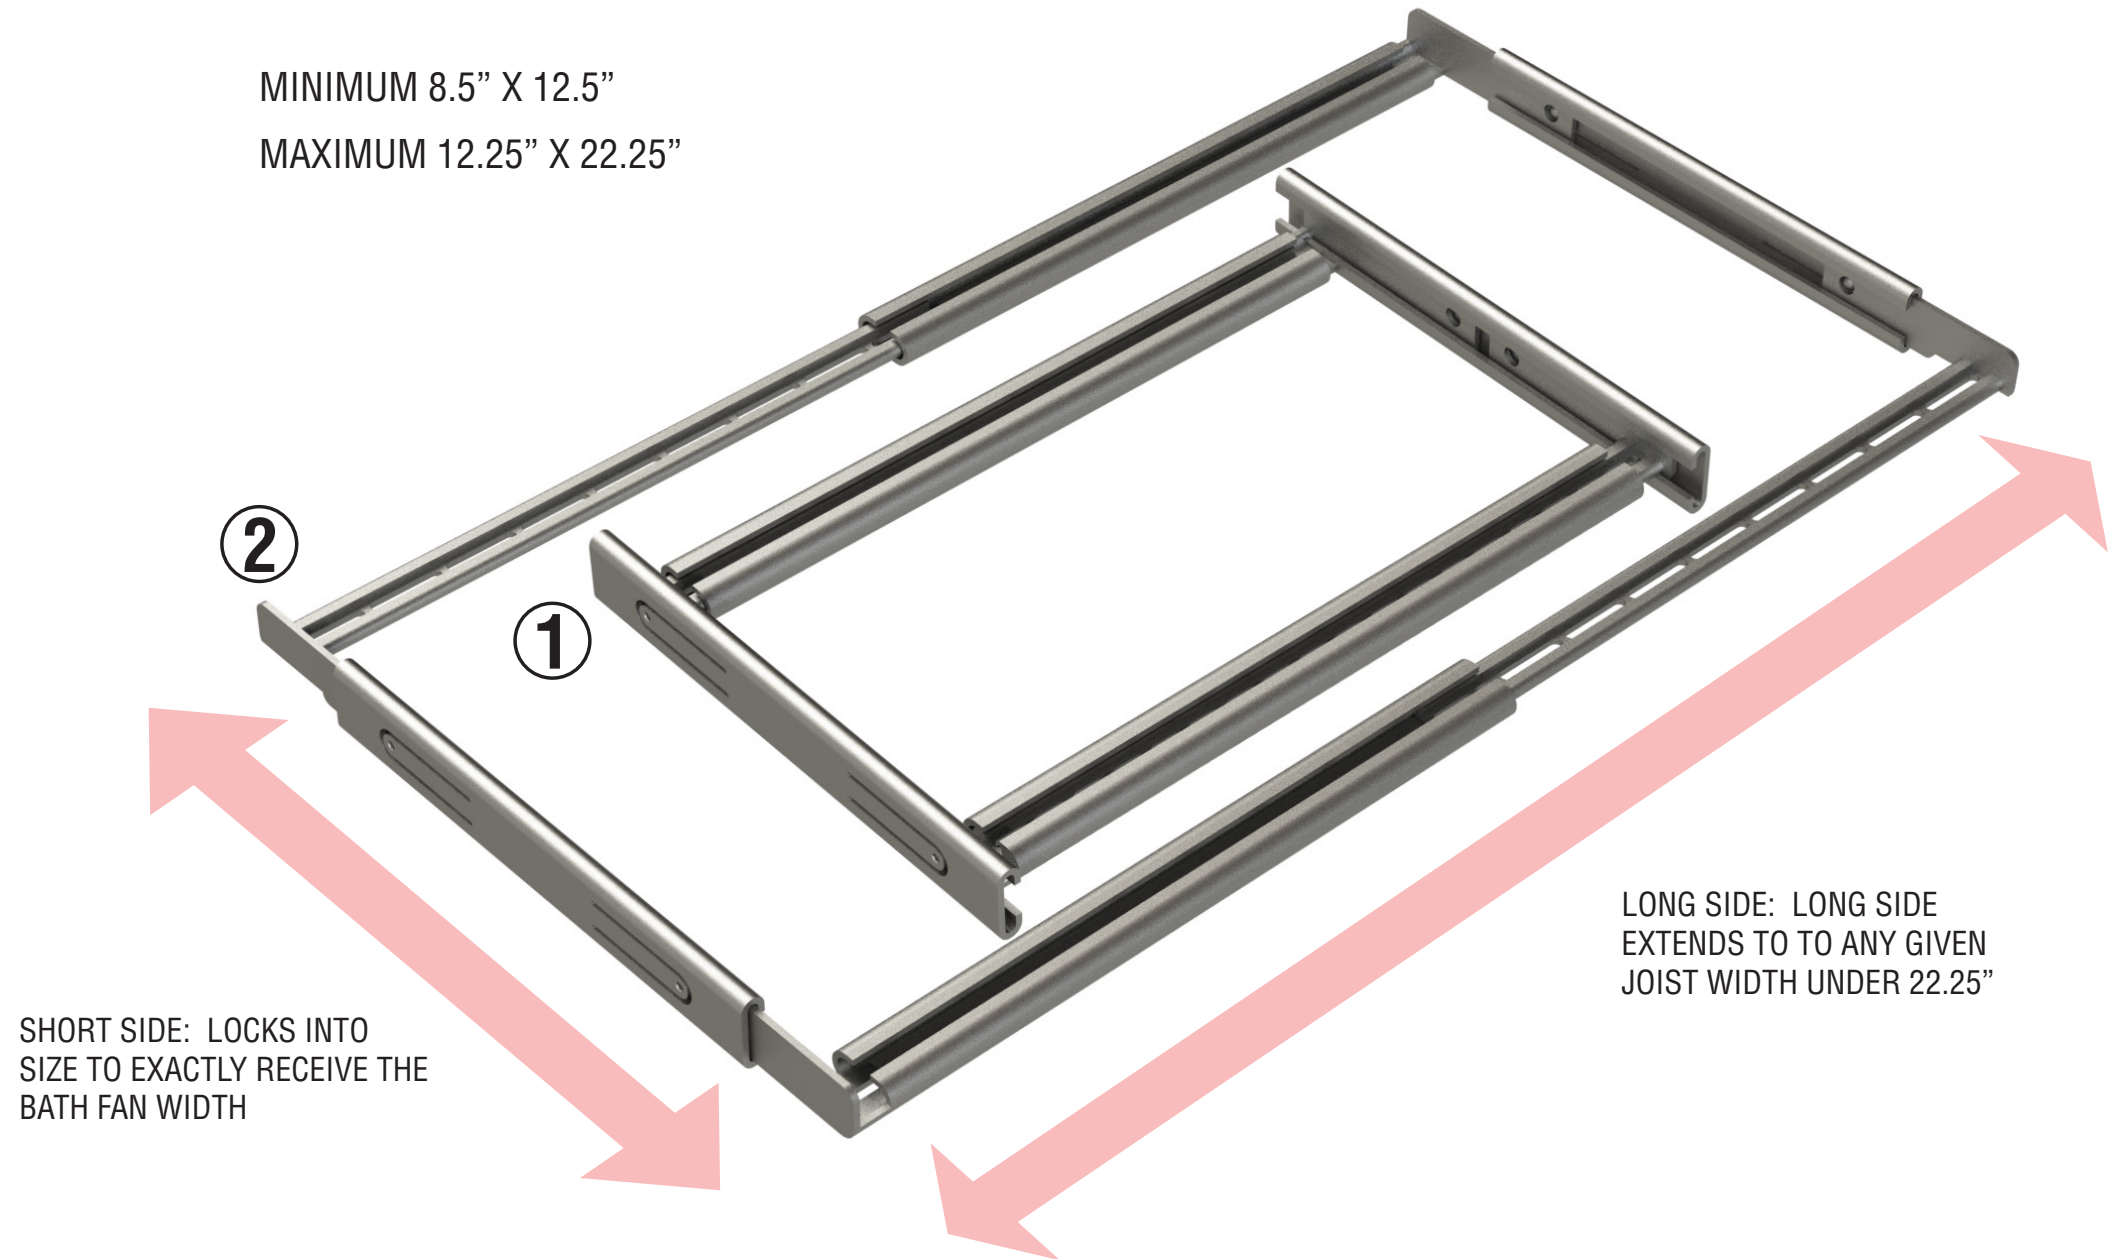


EXPLODED VIEW OF BRACKET

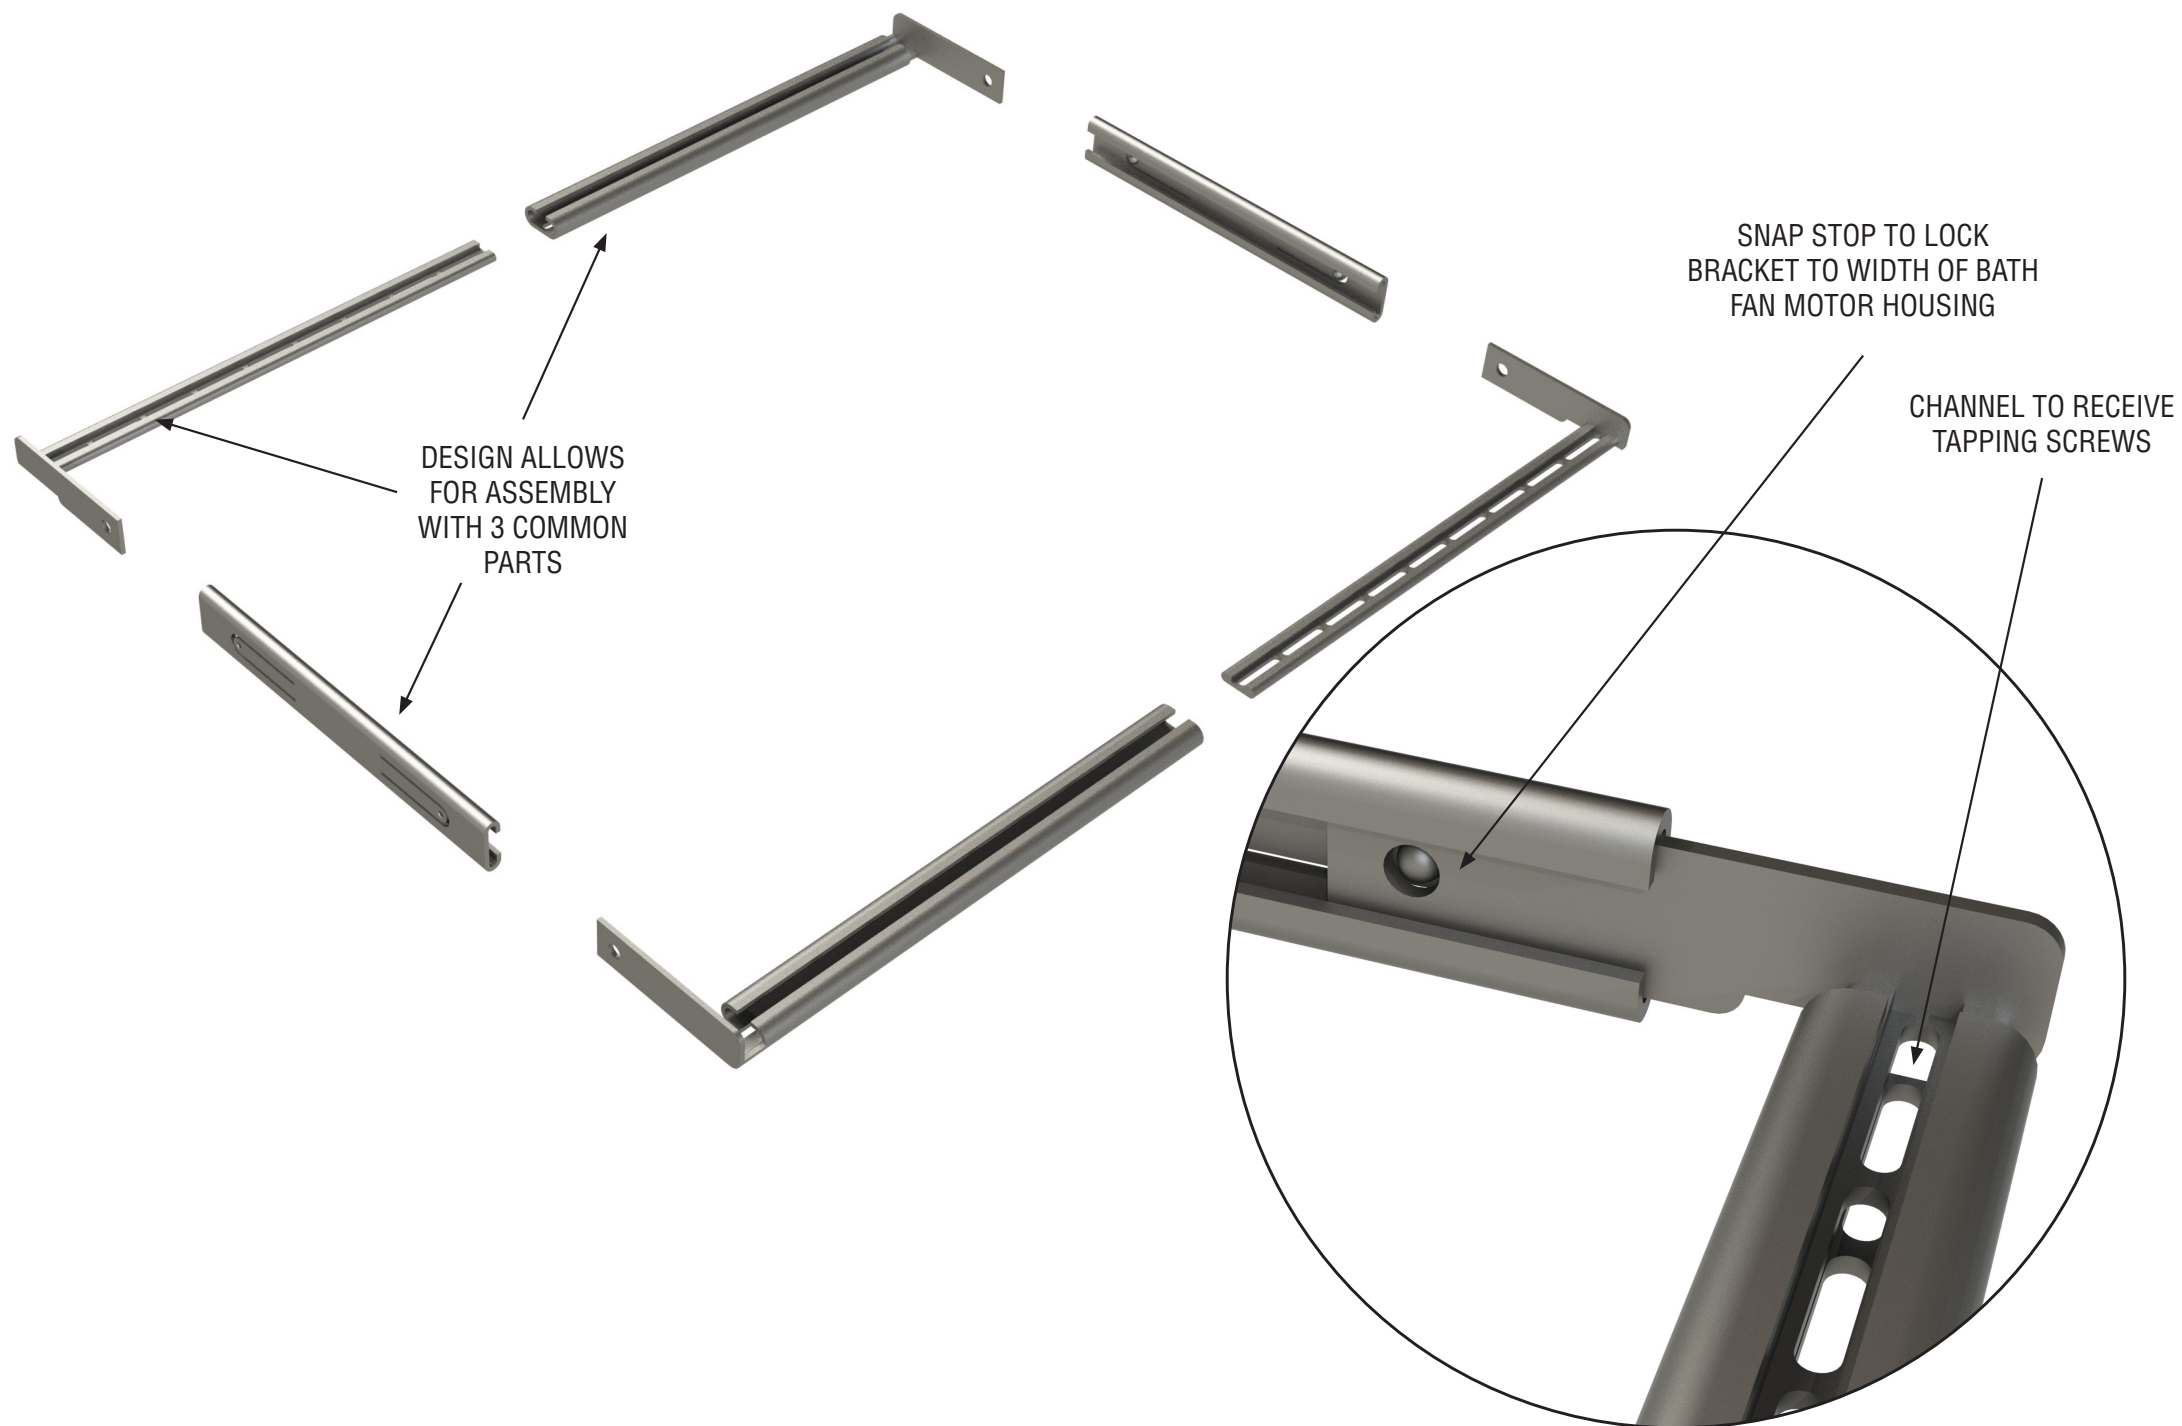


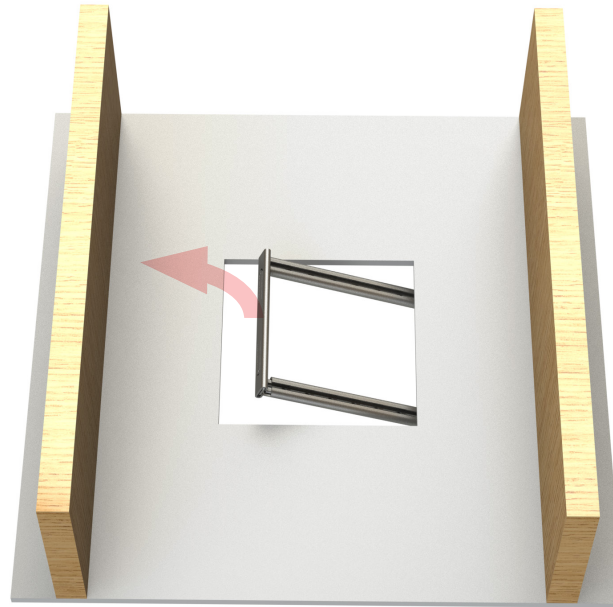


STEP 1: MANEUVER THE BRACKET THROUGH THE CEILING OPENING

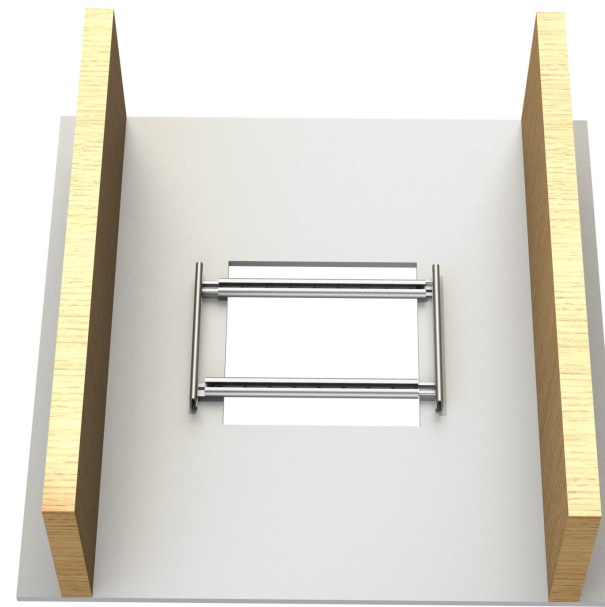


STEP 2: LAY BRACKET AGAINST THE SHEET ROCK

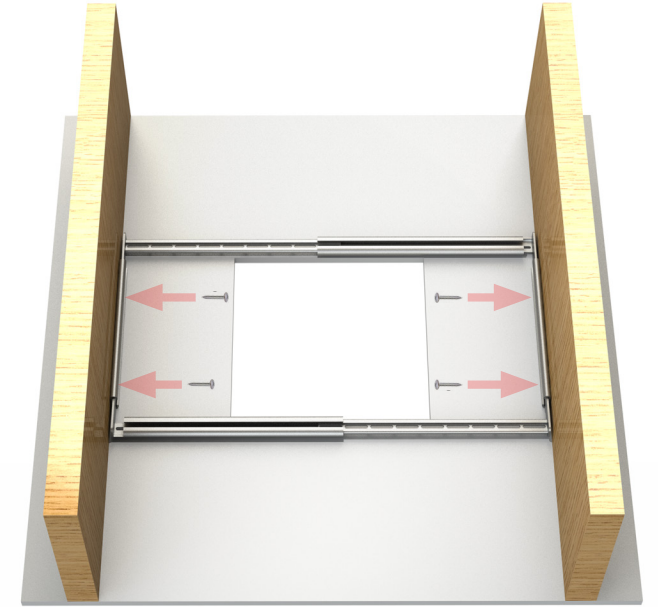



STEP 3: EXPAND BRACKET AND FASTEN TO THE JOIST

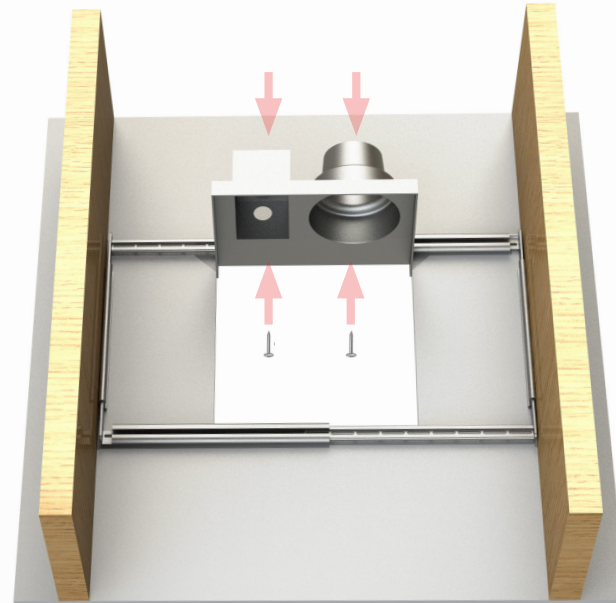

STEP 4: ATTACH HOSE AND ELECTRICAL THEN FASTEN THE BACK HOUSING USING SCREWS THROUGH THE SHEET ROCK TO THE BRACKET.

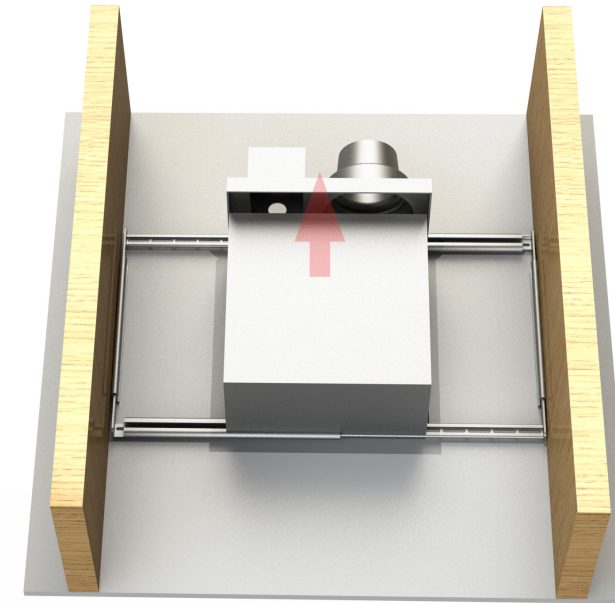

STEP 5: SNAP MOTOR HOUSING INTO PLACE AND FASTEN TO THE BRACKET WITH SCREWS

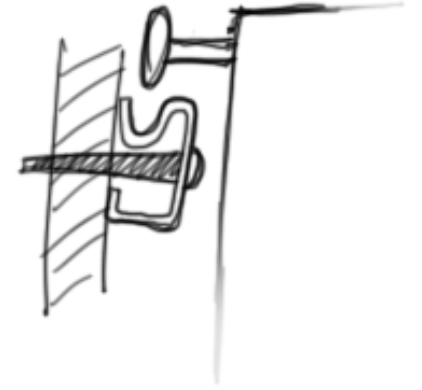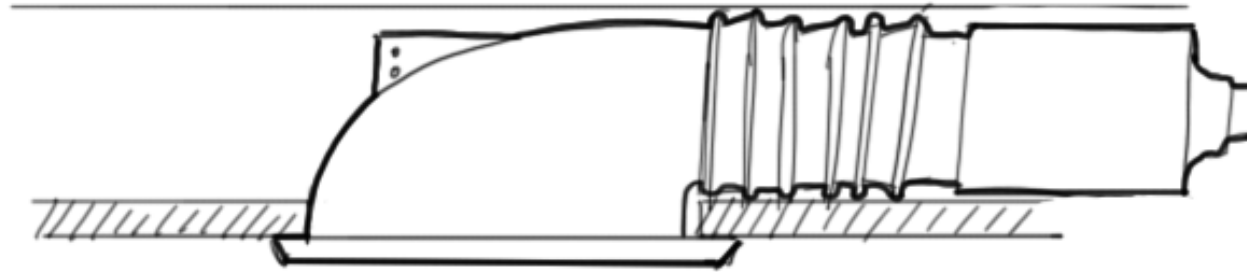

BRACKET AND ROLLER DETAIL

INSTALLATION PROCESS:

STEP 1: INSERT BRACKET INTO CEILING SPACE


STEP 2: ATTACH BRACKET TO JOIST


STEP 3: ATTACH FAN HOUSING TO THE BRACKET

STEP 4: ROLL THE HOUSING TO ONE SIDE TO CONNECT THE ELECTRICAL AND THE HOUSE

STEP 5: PUSH THE HOUSING DOWN PAST THE HOLE

STEP 6: ATTACH THE FAN HOSE TO THE TRIM PIECE

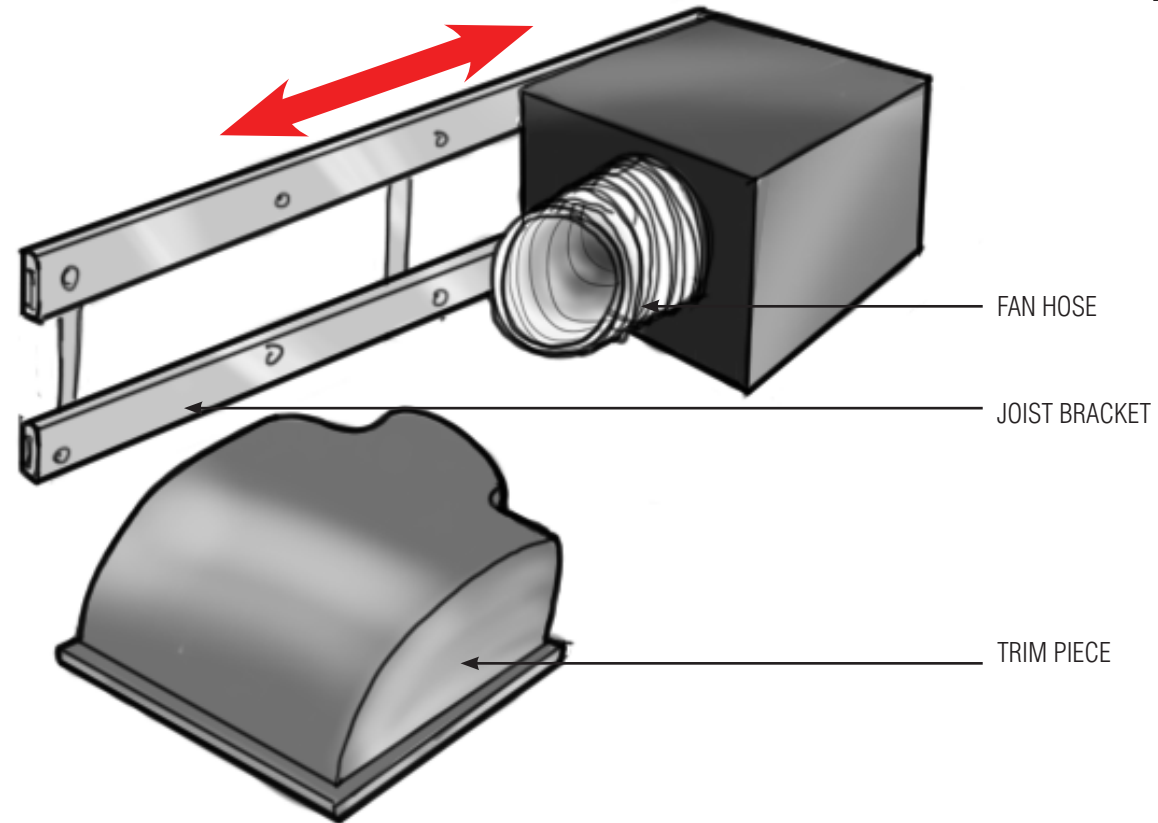

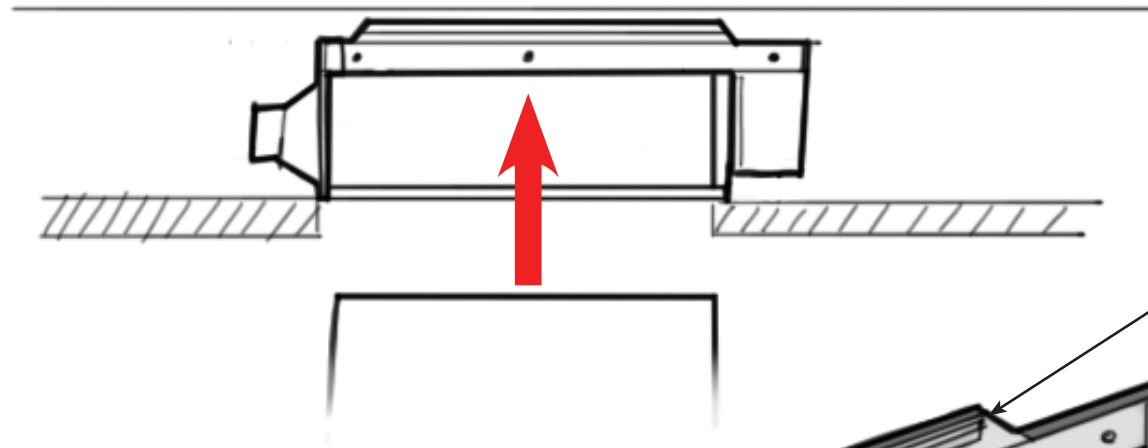

INSTALLATION PROCESS:

STEP 1: INSERT BRACKET INTO CEILING SPACE


STEP 2: ATTACH HOSE TO AIR OUTLET


STEP 3: ATTACH THE BRACKET TO THE JOIST

STEP 4: ATTACH THE WIRES IN THE JUNCTION BOX

STEP 5: PUSH THE FAN HOUSING UP UNTIL IT CATCHES ON THE TEMPORARY LATCH

STEP 6: USE SCREWS TO PERMANENTLY ATTACH THE FAN HOUSING TO THE BRACKET AND THE JOIST

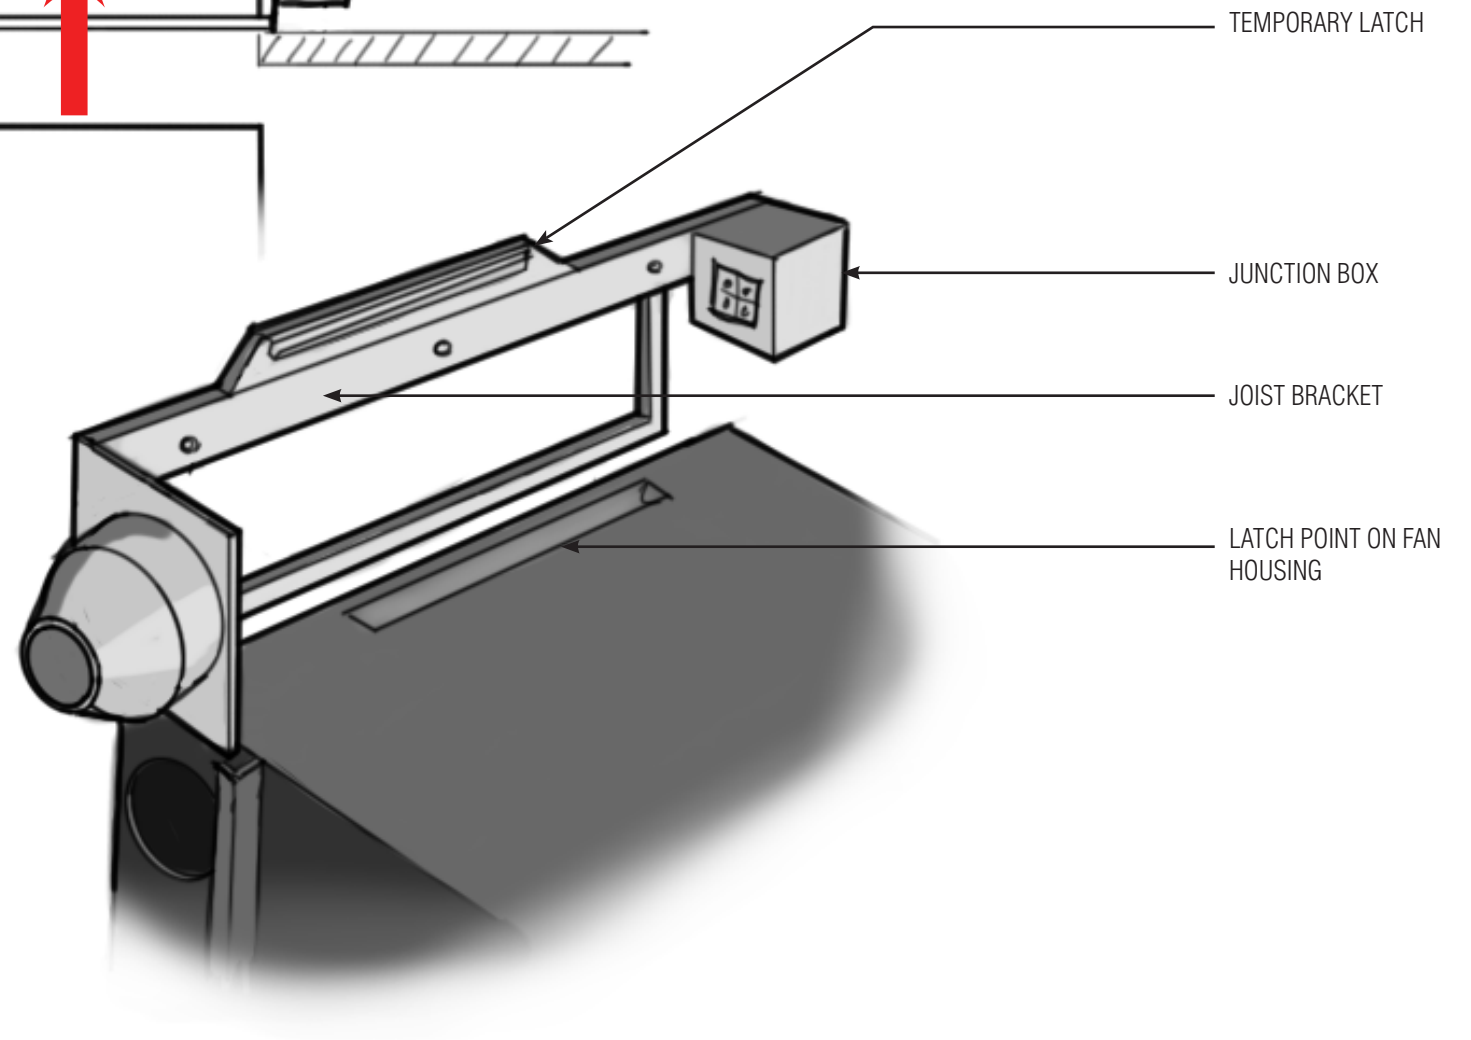

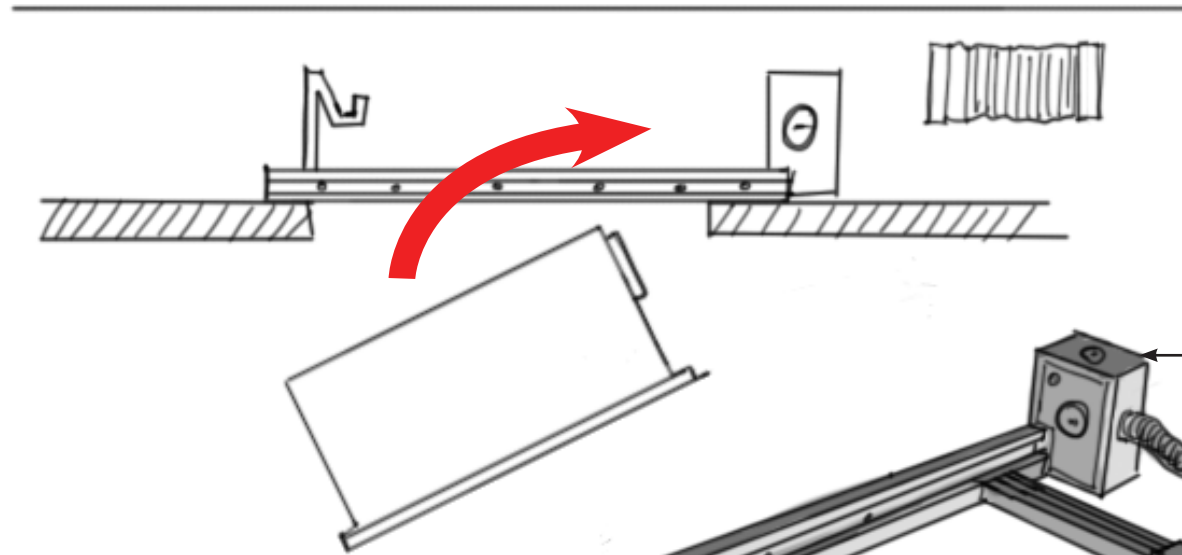

INSTALLATION PROCESS:

STEP 1: INSERT BRACKET INTO CEILING SPACE

STEP 2: ATTACH TO 2 JOISTS

STEP 3: COMPLETE WIRING

STEP 4: ATTACH HOSE COUPLER TO HOUSE HOSE.

STEP 5: TAKE FAN UNIT, ANGLE TOWARD THE HOLE AND ATTACH THE HOUSE COUPLER

STEP 6: PUSH FAN UP INTO TEMPORARY LATCH

STEP 7: PERMANENTLY ATTACH THE FAN TO THE BRACKET OR JOIST

